



FIAT STILO

SOUND SYSTEM QUICK REFERENCE GUIDE



















 



TECHNICAL DATA















Power: 4 x 35W - 6 speakers - Cassette player or CD player or MP3 CD player -
RDS-EON system - Antitheft protection system - Telephone presetting - CD Changer (5 discs) presetting

Fiat Auto S.p.A. - After Sales - Assistenza Tecnica - Ingegneria Assistenziale
Largo Senatore G. Agnelli, 5 - 10040 Volvera - Torino (Italia)
Print no. 603.46.570 - X/2004 - 1st edition - Printed in Italy by Satiz - Turin (Italy)
Coordinamento Editoriale Satiz - Torino

The following tables describe and sum up the basic functions of the sound system. You are however advised to read through the “Sound System” supplement attached to the Owner Handbook for thorough knowledge of the sound system.

Button	MAIN FUNCTIONS	Operation
	<p>ON</p> <p>OFF</p> <p>Volume adjustment</p>	<p>Press briefly the knob</p> <p>Press the knob for long</p> <p>Turn the knob leftwards to turn the volume down</p> <p>Turn the knob rightwards to turn the volume up</p>
	<p>Volume activation/muting (Mute function)</p>	<p>Press briefly the button</p>
	<p>Sound source selection (Radio/Cassette/CD/MP3 CD/CD Changer)</p>	<p>Press briefly the button</p>
	<p>Sound setting:</p> <ul style="list-style-type: none"> • BASS • TREBLE • BALANCE (right/left) • FADER (front/rear) 	<p>For choosing the type of setting: press briefly the button</p>
	<p>Equalizer menu activation (DSP): to modify equalising according to the music you want to play (Jazz, Rock, Classic). The Customer function enables to customise the equalizer functions.</p>	<p>Press the button for long</p>
	<p>Menu function</p>	<p>Press briefly the button to display the main function menu</p> <p>Press the button for long to display the secondary function menu</p>

Button	RADIO FUNCTION	Operation
	Radio band selection (FMI, FM2, FM3, FM AST, LW, MW, AMAST)	Press briefly the button
	Automatic storage (AutoSTore function) of radio stations with the strongest signal in the FMAST (or AMAST) band	Press the button for long
	Radio station scan (FM or AM band)	Press briefly the button
 	Current radio station storage	Press the buttons for long
	Stored station recall	Press briefly the buttons
	Previous/next radio station selection	Press briefly the buttons
	Alternative frequencies ON/OFF (AF function)	Press briefly the button
	Program type selection and displaying (PTY function)	Press the button for long
	Traffic info ON/OFF (TA function)	Press briefly the button
	TA function volume setting	Press the button for long
Button	CASSETTE FUNCTIONS	Operation
	Cassette ejection/reverse	Press briefly the button
	Fast forward/rewind (to tape end)	Press briefly the button
	AMS function ON (go to next/previous track)	Press the button for long
	Cassette track scan (Scan function)	Press briefly the button
	Exit cassette mode /go back to the last radio station selected	Press briefly the button
	Cassette pause	Press briefly the button

Button	COMPACT DISC FUNCTIONS	Operation
	Compact Disc ejection	Press briefly the button
	Track repeat ON/OFF (Track Repeat function)	Press briefly the button
	CD track random playing ON/OFF (RaNDom function)	Press briefly the button
	CD fast track selection (Fast Track function)	Press briefly the button + turn volume knob
	CD track scan (Scan function)	Press briefly the button
	Exit Compact Disc mode/go back to the last radio station selected	Press briefly the button
	Previous/next CD track playing	Press briefly the buttons
	Fast CD track forward/rewind	Press the buttons for long
	CD pause	Press briefly the button
Button	MP3 CD FUNCTIONS	Operation
	Selected MP3 track info (file name, folder number and name, etc ...) display (Disp function)	Press briefly the button
	Selection of info to be displayed during track playback	Press the button for long
	Next/previous folder selection	Press briefly the buttons
	MP3 CD track scan (Scan function)	Press briefly the button
	Exit MP3 CD mode/ go back to the last radio station selected	Press briefly the button
	Previous/next MP3 CD track playing	Press briefly the buttons
	Fast MP3 CD track forward/rewind	Press the buttons for long
	MP3 CD pause	Press briefly the button